



1) Hold the wax stick above the place you want the wax seal to be. Light the wick and allow the wax to drip.



2) Allow the wax to drip in a pool that is a little smaller than the stamp head. The wax will spread out when your stamp is pushed into it.




3) Position your stamp over the wax pool. **MAKE SURE** you have the stamp the correct way up and in the centre.



4) Gently press the stamp into the wax pool until you see the wax oozing out. Hold the stamp in place for 10-15 seconds to allow the wax to cool slightly.



5) Pull the stamp away from the wax pool. You should now have a perfect wax seal. Leave it to cool for a further minute or so.

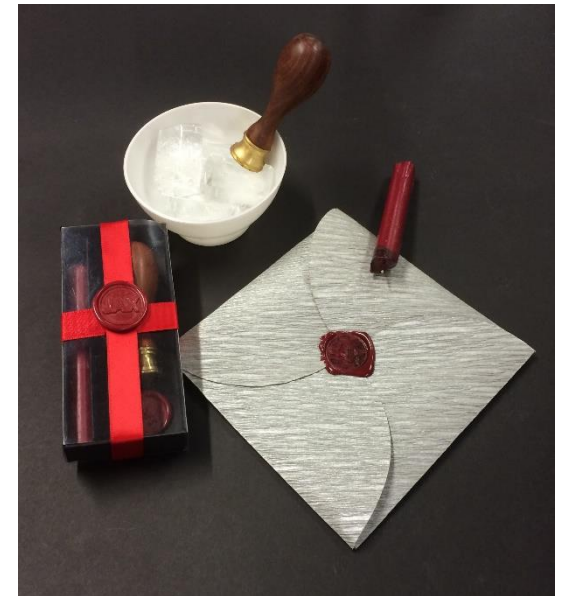

TIP: Keep the wax stamp on ice when doing a few stamps at a time.